



SW-MOTECH
BAGS-CONNECTION



APRILIA / DUCATI
Selection

APRILIA SL 750 Shiver



- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 08 - TRT.00.640.17500/B
- 1 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 08 - BC.TRS.00.110.20000
- 2 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 08 - BC.TRS.00.108.20000
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 08 - BC.TRE.00.110.20000
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 08 - BC.TRE.00.108.20000
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 08 - BC.HTA.00.307.10000
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 08 - BC.HTA.00.304.10000
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 08 BC.HTA.00.306.10000
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 08 - BC.HTA.00.301.10000
- 3 Universal GPS-Kit. Universal GPS Kit. 08 - GPS.00.308.30000/B
- 4 Nonshock Endurance Lenker S. Schwarz. Nonshock Endurance Bar S. Black. 07 - LEN.00.156.11000/B
- Lenkeraufnahme. Schwarz. Bar Mount. Black. 08 - LEH.00.039.16200.06/B
- 5 Lenkeraufnahme. Silber. Bar Mount. Silver. 08 - LEH.00.039.16200.06/S
- Fußrasten-Kit. Silber. Footrest Kit. Silver. 08 - FRS.05.011.10000/S
- Spiegelverlängerung. Schwarz. Mirror Extension. Black. 07 - SVL.00.505.101

APRILIA SMV 750 Dorsoduro



- Riemen-Tankrucksack Enduro LT. Schwarz. Strap-Tankbag Enduro LT. Black. 08 - BC.TRS.00.131.10000
- 1 Riemen-Tankrucksack Enduro. Schwarz. Strap-Tankbag Enduro. Black. 08 - BC.TRS.00.130.10000
- 2 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 08 - BC.HTA.00.307.10000
- 3 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 08 - BC.HTA.00.304.10000
- QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 08 - GPS.13.646.10000/B
- Universal GPS-Kit. Universal GPS Kit. 08 - GPS.00.308.30000/B
- 4 Fußrasten-Kit. Silber. Footrest Kit. Silver. 08 - FRS.13.011.10100/S
- 5 Spiegelverlängerung. Schwarz. Mirror Extension. Black. 08 - SVL.00.505.101





- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 04 - 06 TRT.00.640.17500/B
- 1 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 04 - 06 BC.TRS.00.110.20000
- QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 04 - 06 BC.TRS.00.108.20000
- 2 QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 04 - 06 BC.TRS.00.101.20000
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 04 - 06 BC.TRE.00.110.20000
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 04 - 06 BC.TRE.00.108.20000
- QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 04 - 06 BC.TRE.00.101.20000
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 02 - BC.HTA.00.307.10000
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 02 - BC.HTA.00.304.10000
- 3 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 02 - BC.HTA.00.306.10000
- 4 Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 02 - BCK.HTA.00.053.100/Y
- Lenkerverlegung. Silber. Barback. Silver. 02 - 04 LEH.00.039.152/S
- Lenkererhöhung. Silber. Bar Riser. Silver. 02 - 04 LEH.00.039.150/30/S
- Lenkerverlegung. Schwarz. Barback. Black. 02 - 04 LEH.00.039.152/B
- Lenkererhöhung. Schwarz. Bar Riser. Black. 02 - 04 LEH.00.039.150/30/B
- Spiegelverlängerung. Schwarz. Mirror Extension. Black. 02 - 04 SVL.00.505.101



Monster 696

- QUICK-LOCK EVO Tankring Adapterkit. Schwarz. QUICK-LOCK EVO Tankring Adapter Kit. Black. 09 - TRT.00.640.20300/B
- QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 09 - BC.TRS.00.110.20000
- QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 09 - BC.TRS.00.108.20000
- 1 QUICK-LOCK EVO Engage. Schwarz. QUICK-LOCK EVO Engage. Black. 09 - BC.TRS.00.107.20000
- 2 QUICK-LOCK EVO Trial. Schwarz. QUICK-LOCK EVO Trial. Black. 09 - BC.TRS.00.102.20000
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 09 - BC.TRE.00.110.20000
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 09 - BC.TRE.00.108.20000
- QUICK-LOCK EVO Elektrik Engage. Schwarz. QUICK-LOCK EVO Electric Engage. Black. 09 - BC.TRE.00.107.20000
- QUICK-LOCK EVO Elektrik Trial. Schwarz. QUICK-LOCK EVO Electric Trial. Black. 09 - BC.TRE.00.102.20000
- 4 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 09 - BC.HTA.00.307.10000
- Universal GPS-Kit. Universal GPS Kit. 09 - GPS.00.308.30000/B

848 EVO

- BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 09 - BC.HTA.22.740.10000/B
- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 09 - TRT.00.640.11000/B
- QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 09 - BC.TRS.00.110.20000
- 3 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 09 - BC.TRS.00.108.20000
- QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 09 - BC.TRS.00.101.20000
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 09 - BC.TRE.00.110.20000
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 09 - BC.TRE.00.108.20000
- QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 09 - BC.TRE.00.101.20000
- 4 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 09 - BC.HTA.00.307.10000
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 09 - BC.HTA.00.304.10000
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 09 - BC.HTA.00.306.10000
- 5 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 09 - BC.HTA.00.301.10000
- Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 09 - BCK.HTA.00.053.100/Y



DUCATI

848 Streetfighter



- 1 BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 11 – [BC.HTA.22.740.10100/B](#)
- 2 QUICK-LOCK EVO Tankring Adapterkit. Schwarz. QUICK-LOCK EVO Tankring Adapter Kit. Black. 11 – [TRT.00.640.30000/B](#)
- 3 QUICK-LOCK EVO Engage. Schwarz. QUICK-LOCK EVO Engage. Black. 11 – [BC.TRS.00.107.20000](#)
QUICK-LOCK EVO Trial. Schwarz. QUICK-LOCK EVO Trial. Black. 11 – [BC.TRS.00.102.20000](#)
- 4 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 11 – [GPS.22.646.10100/B](#)
Universal GPS-Kit. Universal GPS Kit. 11 – [GPS.00.308.30000/B](#)
- 5 Spiegelverlängerung. Schwarz. Mirror Extension. Black. 11 – [SVL.00.505.10300/B](#)
- 6 Sturzpadd-Kit. Frame Slider Kit. 11 – [STP.22.590.10000/B](#)



DUCATI

1098 / 1098 R



1098

- 1 BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 07 – 09 [BC.HTA.22.740.10000/B](#)

1098 / 1098 R

- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 07 – 09 [TRT.00.640.11000/B](#)
- QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 07 – 09 [BC.TRS.00.110.20000](#)
- QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 07 – 09 [BC.TRS.00.108.20000](#)
- 2 QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 07 – 09 [BC.TRS.00.101.20000](#)
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 07 – 09 [BC.TRE.00.110.20000](#)
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 07 – 09 [BC.TRE.00.108.20000](#)
- QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 07 – 09 [BC.TRE.00.101.20000](#)
- 3 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 07 – 09 [BC.HTA.00.307.10000](#)
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 07 – 09 [BC.HTA.00.304.10000](#)
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 07 – 09 [BC.HTA.00.306.10000](#)
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 07 – 09 [BC.HTA.00.301.10000](#)
- Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 07 – 09 [BCK.HTA.00.053.100/Y](#)



DUCATI

1198 / 1198 R



1198

- 1 QUICK-LOCK EVO Engage. Schwarz. QUICK-LOCK EVO Engage. Black. 09 – BC.TRS.00.107.20000
- 2 BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 09 – BC.HTA.22.740.10000/B

1198 / 1198 R

- 3 QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 09 – TRT.00.640.11000/B
- QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 09 – BC.TRS.00.110.20000
- QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 09 – BC.TRS.00.108.20000
- QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 09 – BC.TRS.00.101.20000
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 09 – BC.TRE.00.110.20000
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 09 – BC.TRE.00.108.20000
- QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 09 – BC.TRE.00.101.20000
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 09 – BC.HTA.00.307.10000
- 4 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 09 – BC.HTA.00.304.10000
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 09 – BC.HTA.00.306.10000
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 09 – BC.HTA.00.301.10000
- Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 09 – BCK.HTA.00.053.100/Y



DUCATI

1199 Panigale / S



- 1 BLAZE® H Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 12 – BC.HTA.22.740.10200/B
- 2 QUICK-LOCK EVO Tankring Adapterkit. Schwarz. QUICK-LOCK EVO Tankring Adapter Kit. Black. 12 – TRT.00.640.30000/B
- 3 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 12 – BC.TRS.00.110.20000
- QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 12 – BC.TRS.00.108.20000
- QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 12 – BC.TRS.00.101.20000
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 12 – BC.TRE.00.110.20000
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 12 – BC.TRE.00.108.20000
- QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 12 – BC.TRE.00.101.20000
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 12 – BC.HTA.00.307.10000
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 12 – BC.HTA.00.304.10000
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 12 – BC.HTA.00.306.10000
- Hecktasche Racepack®. Schwarz. Tailbag Racepack®. Black. 12 – BC.HTA.00.302.10000
- Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 12 – BCK.HTA.00.053.100/Y
- 4 Spiegelverlängerung. Schwarz. Mirror Extension. Black. 11 – SVL.22.501.10000/B





Multistrada 1200 / S




Multistrada 1200

- 1 Hecktasche Jetpack. Schwarz. Tailbag Jetpack. Black. 10 – [BC.HTA.00.303.10000](#)

Multistrada 1200 / S

- 2 AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 10 – [KFT.22.140.60000/B](#)
 3 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 10 – [KFT.22.140.20000/B](#)
 QUICK-LOCK Kontur-Kofferträger. Schwarz. QUICK-LOCK Profile Side Carrier. Black. 10 – [KFT.22.140.15000/B](#)
 4 ALU-RACK. Schwarz. ALU-RACK. Black. 10 – [GPT.22.139.15000/B](#)
 QUICK-LOCK Gepäckbrücken-Erweiterung. Schwarz. QUICK-LOCK Luggage Rack Extension. Black. 10 – [GPT.00.152.43001/B](#)
 STEEL-RACK. Schwarz. STEEL-RACK. Black. 10 – [GPT.22.139.20001/B](#)
 QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 10 – [TRT.00.640.12600/B](#)
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 10 – [BC.TRS.00.108.20000](#)
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 10 – [BC.TRS.00.110.20000](#)
 QUICK-LOCK EVO Engage. Schwarz. QUICK-LOCK EVO Engage. Black. 10 – [BC.TRS.00.107.20000](#)
 QUICK-LOCK EVO Trial. Schwarz. QUICK-LOCK EVO Trial. Black. 10 – [BC.TRS.00.102.20000](#)
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 10 – [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 10 – [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Engage. Schwarz. QUICK-LOCK EVO Electric Engage. Black. 10 – [BC.TRE.00.107.20000](#)
 QUICK-LOCK EVO Elektrik Trial. Schwarz. QUICK-LOCK EVO Electric Trial. Black. 10 – [BC.TRE.00.102.20000](#)
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 10 – [BC.HTA.00.307.10000](#)
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 10 – [BC.HTA.00.301.10000](#)
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 10 – [BC.HTA.00.306.10000](#)
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 10 – [BC.HTA.00.305.10000](#)
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 10 – [BC.HTA.00.304.10000](#)
 Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 10 – [BCK.HTA.00.053.100/Y](#)
 Hecktasche Drybag L. Neon-Gelb. Tailbag Drybag L. Neon-Yellow. 10 – [BCK.HTA.00.047.100/Y](#)
 5 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 10 – [GPS.22.646.10000/B](#)

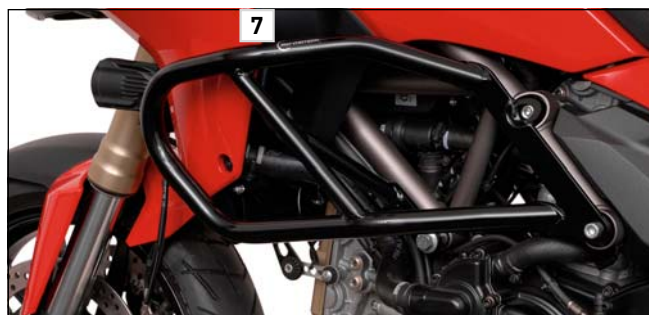

- QUICK-LOCK GPS-Halter-Set M. Schwarz. QUICK-LOCK GPS Mount Set M. Black. 10 – [GPS.22.646.50000/M](#)
 QUICK-LOCK GPS-Halter-Set L. Schwarz. QUICK-LOCK GPS Mount Set L. Black. 10 – [GPS.22.646.50000/L](#)
 QUICK-LOCK GPS-Halter-Set XL. Schwarz. QUICK-LOCK GPS Mount Set XL. Black. 10 – [GPS.22.646.50000/XL](#)
 QUICK-LOCK GPS-Halter-Set S. Schwarz. QUICK-LOCK GPS Mount Set S. Black. 10 – [GPS.22.646.50000/S](#)
 Universal GPS-Kit. Universal GPS-Kit. 10 – [GPS.00.308.30000/B](#)
 6 Lenkererhöhung. Schwarz. Bar Riser. Black. 10 – [LEH.22.039.10000/B](#)
 Fußrasten-Kit. Silber. Footrest Kit. Silver. 10 – [FRS.22.011.10000/S](#)
 Spiegelverlängerung. Schwarz. Mirror Extension. Black. 10 – [SVL.22.504.10000/B](#)
 7 Schutzbügel. Schwarz. Crashbar. Black. 10 – [SBL.22.142.10000/B](#)
 8 Motorschutz. Silber. Engine Guard. Silver. 10 – [MSS.22.143.10000/S](#)
 HAWK Nebelscheinwerfer-Set. Schwarz. HAWK Fog Light Set. Black. 10 – [NSW.22.004.50000/M](#)
 HAWK Scheinwerferhalter-Set. Schwarz. HAWK Light Mount Set. Black. 10 – [NSW.22.004.10001/B](#)
 HAWK Nebelscheinwerfer-Set. Silber. HAWK Fog Light Set. Silver. 10 – [NSW.22.004.50000/S](#)
 Handprotektorenschutzbügel-Kit. Schwarz. Handguard Security Bar Kit. Black. 10 – [HPR.00.220.21000/B](#)
 Hauptständer. Schwarz. Centerstand. Black. 10 – [HPS.22.141.10001/B](#)





SW-MOTECH
BAGS-CONNECTION
engineering for motorbikes

SW-MOTECH GmbH & Co. KG

BAGS-CONNECTION GmbH & Co. KG

Ernteweg 8/10 . 35282 Rauschenberg . Germany

phone +49 6425 8168-050 . fax +49 6425 8168-10

info@sw-bc.com . www.sw-bc.com

Händler / Dealer