



SW-MOTECH
BAGS-CONNECTION



HONDA
Selection

**CBF 125**

- 1 ALU-RACK. Schwarz. ALU-RACK. Black. 09 – **GPT.01.693.15000/B**
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 09 – **BC.HTA.00.307.10000**
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 09 – **BC.HTA.00.304.10000**
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 09 – **BC.HTA.00.305.10000**
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 09 – **BC.HTA.00.306.10000**
 Hecktasche Racepack®. Schwarz. Tailbag Racepack®. Black. 09 – **BC.HTA.00.302.10000**
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 09 – **BC.HTA.00.301.10000**
 Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 09 – **BCK.HTA.00.053.100/Y**
 Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 09 – **SVL.00.505.101**
 2 Schutzbügel. Schwarz. Crashbar. Black. 09 – **SBL.01.694.10000/B**

**CBR 125 R**

- ALU-RACK. Schwarz. ALU-RACK. Black. 03 – 10 **GPT.01.323.100/B**
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 03 – **BC.HTA.00.307.10000**
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 03 – **BC.HTA.00.304.10000**
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 03 – **BC.HTA.00.305.10000**
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 03 – **BC.HTA.00.306.10000**
 Hecktasche Racepack®. Schwarz. Tailbag Racepack®. Black. 03 – **BC.HTA.00.302.10000**
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 03 – **BC.HTA.00.301.10000**
 Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 03 – **BCK.HTA.00.053.100/Y**
 Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 03 – 10 **SVL.00.505.101**
 Schutzbügel. Schwarz. Crashbar. Black. 03 – 06 **SBL.01.324.100**



- 1 ALU-RACK. Silber. ALU-RACK. Silver. 01 – 08 **GPT.01.336.100/S**
 STEEL-RACK. Silber. STEEL-RACK. Silver. 01 – 08 **GPT.01.336.20001/B**
 Riemen-Tankrucksack Enduro. Schwarz. Strap Tankbag Enduro. Black. 01 – **BC.TRS.00.130.10000**
 Riemen-Tankrucksack Enduro LT. Schwarz. Strap Tankbag Enduro LT. Black. 01 – **BC.TRS.00.131.10000**
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 01 – **BC.HTA.00.307.10000**
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 01 – **BC.HTA.00.304.10000**
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 01 – **BC.HTA.00.305.10000**
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 01 – **BC.HTA.00.306.10000**
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 01 – **BC.HTA.00.301.10000**
 Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 01 – **BCK.HTA.00.053.100/Y**
 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 07 – 08 **GPS.01.646.10100/B**
 Universal GPS-Kit Universal GPS Kit 07 – 08 **GPS.00.308.30000/B**
 Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 01 – 08 **LEH.00.039.168/B**
 Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 01 – 08 **LEH.00.039.168/S**
 Lenkerverlegung. Silber. Barback. Silver. 01 – 08 **LEH.00.039.152/S**
 Lenkerverlegung. Schwarz. Barback. Black. 01 – 08 **LEH.00.039.152/B**
 Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 01 – 08 **LEH.00.039.150/30/S**
 Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 01 – 08 **LEH.00.039.150/30/B**
 Spiegelverlängerung. Schwarz. Verkleidungsausleger. Mirror Extension. Black. Profile. 01 – 08 **SVL.00.503.100**
 2 Schutzbügel. Schwarz. Crashbar. Black. 07 – 08 **SBL.01.713.10000/B**
 Hauptständer. Schwarz. Nicht Modell 2004 (Abgasführung). Centerstand. Black. Not for model 2004 (exhaust system). 01 – 03 **HPS.01.082.100**
 3 Hauptständer. Schwarz. Ab Modell 2004 (mit Katalysator). Centerstand. Black. Since model 2004 (with catalyst). 04 – 08 **HPS.01.298.100**





- 1 BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 04 – 06 BC.HTA.01.740.10200/B
AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 04 – 06 KFT.01.278.60000/B
- 2 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 04 – 06 KFT.01.278.200
QUICK-LOCK Kontur-Kofferträger. Schwarz. QUICK-LOCK Profile Side Carrier. Black. 04 – 06 KFT.01.278.150
- 3 ALU-RACK. Schwarz. ALU-RACK. Black. 04 – 06 GPT.01.277.15000/B
- 4 QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 04 – 06 TRT.00.640.10600/B
QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 04 – 06 BC.TRS.00.110.20000
QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 04 – 06 BC.TRS.00.108.20000
QUICK-LOCK EVO Engage. Schwarz. QUICK-LOCK EVO Engage. Black. 04 – 06 BC.TRS.00.107.20000
QUICK-LOCK EVO Trial. Schwarz. QUICK-LOCK EVO Trial. Black. 04 – 06 BC.TRS.00.102.20000
QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 04 – 06 BC.TRE.00.110.20000
QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 04 – 06 BC.TRE.00.108.20000
QUICK-LOCK EVO Elektrik Engage. Schwarz. QUICK-LOCK EVO Electric Engage. Black. 04 – 06 BC.TRE.00.107.20000
QUICK-LOCK EVO Elektrik Trial. Schwarz. QUICK-LOCK EVO Electric Trial. Black. 04 – 06 BC.TRE.00.102.20000
Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 04 – 06 BC.HTA.00.307.10000
Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 04 – 06 BC.HTA.00.304.10000
Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 04 – 06 BC.HTA.00.305.10000
Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 04 – 06 BC.HTA.00.306.10000
Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 04 – 06 BC.HTA.00.301.10000
Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 04 – 06 BCK.HTA.00.053.100/Y
Universal GPS-Kit Universal GPS Kit 04 – 06 GPS.00.308.30000/B
Lenkerverlegung. Silber. Barback. Silver. 04 – 06 LEH.00.039.152/S
Lenkerverlegung. Schwarz. Barback. Black. 04 – 06 LEH.00.039.152/B
Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 04 – 06 LEH.00.039.150/30/S
Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 04 – 06 LEH.00.039.150/30/B
Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 04 – 06 LEH.00.039.168/B
Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 04 – 06 LEH.00.039.168/S
Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 04 – 06 SVL.00.505.101
Hauptständer. Schwarz. Centerstand. Black. 04 – 06 HPS.01.276.100

**CBF 500**

Schutzbügel. Schwarz. Crashbar. Black. 04 – 06 SBL.01.275.100

CBF 600 N

QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 04 – BC.TRS.00.104.20000

QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 04 – BC.TRE.00.104.20000

5 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 08 – GPS.01.646.10200/B

Lenkererhöhung. Silber. ø 22 mm. h 20 mm. Bar Riser. Silver. ø 22 mm. h 20 mm. 08 – LEH.00.039.150/20/S

Lenkererhöhung. Schwarz. ø 22 mm. h 20 mm. Bar Riser. Black. ø 22 mm. h 20 mm. 08 – LEH.00.039.150/20/B

Schutzbügel. Schwarz. Crashbar. Black. 04 – 07 SBL.01.279.100

Schutzbügel. Schwarz. Crashbar. Black. 08 – SBL.01.535.100

Sturzpad-Kit Frame Slider Kit 08 – 09 STP.01.590.10400/B

Hauptständer. Schwarz. Centerstand. Black. 08 – HPS.01.536.100

CB F 600 S

QUICK-LOCK Kontur-Kofferträger. Schwarz. QUICK-LOCK Profile Side Carrier. Black. 04. – KFT.01.278.150

QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 04 – BC.TRS.00.104.20000

QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 04 – BC.TRE.00.104.20000

QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 08 – GPS.01.646.10200/B

Lenkererhöhung. Silber. ø 22 mm. h 20 mm. Bar Riser. Silver. ø 22 mm. h 20 mm. 08 – LEH.00.039.150/20/S

Lenkererhöhung. Schwarz. ø 22 mm. h 20 mm. Bar Riser. Black. ø 22 mm. h 20 mm. 08 – LEH.00.039.150/20/B

Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 04 – 07 SVL.01.501.10900/B

Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 07 – SVL.01.501.10800/B

Spiegelverlängerung. Schwarz. Gelenk-Distanzstück I. Mirror Extension. Black. Hinge I. 04 – SVL.01.500.100

Schutzbügel. Schwarz. Crashbar. Black. 04 – 07 SBL.01.279.100


Schutzbügel. Schwarz. Crashbar. Black. 08 – SBL.01.535.100

Sturzpad-Kit Frame Slider Kit 08 – 09 STP.01.590.10400/B

Hauptständer. Schwarz. Centerstand. Black. 08 – HPS.01.536.100



A side profile of a white Honda CBR 600F4i motorcycle. The bike features black saddlebags, a black seat, and black accents on the fairings. Two callout boxes labeled '1' are present: one pointing to the front suspension fork and another pointing to the rear suspension shock absorber.

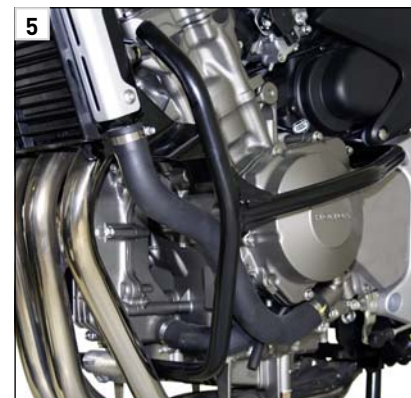

CB 600 S Hornet



HONDA

CBR 600 RR / XL 600 V Transalp



CBR 600 RR

- 1 BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 07 – [BC.HTA.01.740.10000/B](#)
- 2 QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 03 – [TRT.00.640.10600/B](#)
- QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 03 – [BC.TRS.00.110.20000](#)
- QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 03 – [BC.TRS.00.108.20000](#)
- QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 03 – [BC.TRS.00.101.20000](#)
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 03 – [BC.TRE.00.110.20000](#)
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 03 – [BC.TRE.00.108.20000](#)
- QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 03 – [BC.TRE.00.101.20000](#)
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 03 – [BC.HTA.00.304.10000](#)
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 03 – [BC.HTA.00.306.10000](#)
- Hecktasche Racepack®. Schwarz. Tailbag Racepack®. Black. 03 – [BC.HTA.00.302.10000](#)
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 03 – [BC.HTA.00.301.10000](#)
- Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 03 – [BCK.HTA.00.053.100/Y](#)
- 3 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 07 – [SVL.01.501.10700/B](#)
- Sturzpad-Kit Frame Slider Kit. 07 – [STP.01.590.10500/B](#)



XL 600 V Transalp

- Riemen-Tankrucksack Enduro. Schwarz. Strap Tankbag Enduro. Black. 87 – 99 [BC.TRS.00.130.10000](#)
- Riemen-Tankrucksack Enduro LT. Schwarz. Strap Tankbag Enduro LT. Black. 87 – 99 [BC.TRS.00.131.10000](#)
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 87 – 99 [BC.HTA.00.307.10000](#)
- Hecktasche Jetpack. Schwarz. Tailbag Jetpack. Black. 87 – 99 [BC.HTA.00.303.10000](#)
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 87 – 99 [BC.HTA.00.304.10000](#)
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 87 – 99 [BC.HTA.00.306.10000](#)
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 87 – 99 [BC.HTA.00.301.10000](#)
- Hecktasche Drybag L. Neon-Gelb. Tailbag Drybag L. Neon-Yellow. 87 – 99 [BCK.HTA.00.047.100/Y](#)
- QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 87 – 99 [GPS.00.646.10500/B](#)
- Universal GPS-Kit Universal GPS Kit 87 – 99 [GPS.00.308.30000/B](#)
- Nonshock Endurance Lenker. Schwarz. ø 28 mm. Nonshock Endurance Bar. Black. ø 28 mm. 87 – 96 [LEN.00.156.10001/B](#)
- Lenkeraufnahme. Schwarz. ø 28 mm. M12. Bar Mount. Black. ø 28 mm. M12. 87 – 96 [LEH.00.039.16300.02/B](#)
- Lenkeraufnahme. Silber. ø 28 mm. M12. Bar Mount. Silver. ø 28 mm. M12. 87 – 96 [LEH.00.039.16300.02/S](#)
- Lenkererhöhung. Silber. ø 22 mm. h 25 mm. Bar Riser. Silver. ø 22 mm. h 25 mm. 87 – 99 [LEH.00.039.150/25/S](#)



HONDA

XL 600 V Transalp / FMX 650



- Lenkererhöhung. Schwarz. ø 22 mm. h 25 mm. Bar Riser. Black. ø 22 mm. h 25 mm. 87 – 99 [LEH.00.039.150/25/B](#)
- Fußrasten-Kit. Silber. Footrest Kit. Silver. 87 – 96 [FRS.01.011.10200/S](#)
- Spiegelverlängerung. Schwarz. Lenkerausleger. Mirror Extension. Black. Universal. 87 – 99 [SVL.00.505.101](#)
- Schutzbügel. Schwarz. Nicht für Modell California. Crashbar. Black. Not North American model. 87 – 99 [SBL.01.083.100](#)

- 4 Motorschutz. Silber. Nicht für Modell California. Crashbar. Silver. Not North American model. 87 – 99 [MSS.01.016.100](#)
- BB STORM Handprotektoren-Kit. Schwarz. BB STORM Handguard Kit. Black. 87 – 96 [HPR.00.220.10900/B](#)
- KOBRA Handprotektoren-Kit. Schwarz. KOBRA Handguard Kit. Black. 87 – 96 [HPR.00.220.20900/B](#)
- 5 Hauptständer. Schwarz. Nicht für Modell California. Centerstand. Black. Not North American model. 91 – 00 [HPS.01.035.100](#)

FMX 650

- 6 ALU-RACK. Schwarz. ALU-RACK. Black. 05 – 07 [GPT.01.355.100/B](#)
- Riemen-Tankrucksack Enduro LT. Schwarz. Strap Tankbag Enduro LT. Black. 05 – 07 [BC.TRS.00.131.10000](#)
- Riemen-Tankrucksack Enduro. Schwarz. Strap Tankbag Enduro. Black. 05 – 07 [BC.TRS.00.130.10000](#)
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 05 – 07 [BC.HTA.00.307.10000](#)
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 05 – 07 [BC.HTA.00.304.10000](#)
- Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 05 – 07 [BC.HTA.00.305.10000](#)
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 05 – 07 [BC.HTA.00.306.10000](#)
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 05 – 07 [BC.HTA.00.301.10000](#)
- Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 05 – 07 [BCK.HTA.00.053.100/Y](#)



- Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 05 – 07 [LEH.00.039.168/S](#)
- Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 05 – 07 [LEH.00.039.168/B](#)
- Lenkerverlegung. Schwarz. Barback. Black. 05 – 07 [LEH.00.039.152/B](#)
- Lenkerverlegung. Silber. Barback. Silver. 05 – 07 [LEH.00.039.152/S](#)
- Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 05 – 07 [LEH.00.039.150/30/B](#)
- Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 05 – 07 [LEH.00.039.150/30/S](#)
- Spiegelverlängerung. Schwarz. Lenkerausleger. Mirror Extension. Black. Universal. 05 – 0 [SVL.00.505.101](#)
- Schutzbügel. Schwarz. Crashbar. Black. 05 – 07 [SBL.01.357.100](#)

- 7 Hauptständer. Schwarz. Centerstand. Black. 05 – 07 [HPS.01.356.100](#)
- Hauptständer-Hebegriff. Schwarz. Centerstand Assist Grip. Black. 05 – 07 [HPS.01.356.910](#)



XL 650 V Transalp



- 1 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 02 – 06 ☎ **KFT.01.247.200**
- 2 ALU-RACK. Silber. ALU-RACK. Silver. 00 – 06 ☎ **GPT.01.336.100/S**
STEEL-RACK. Schwarz. STEEL-RACK. Black. 00 – 06 ☎ **GPT.01.336.20001/B**
Riemen-Tankrucksack Enduro LT. Schwarz. Strap Tankbag Enduro LT. Black. 00 – 06 ☎ **BC.TRS.00.131.10000**
- 3 Riemen-Tankrucksack Enduro. Schwarz. Strap Tankbag Enduro. Black. 00 – 06 ☎ **BC.TRS.00.130.10000**
Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 00 – 06 ☎ **BC.HTA.00.307.10000**
Hecktasche Jetpack. Schwarz. Tailbag Jetpack. Black. 00 – 06 ☎ **BC.HTA.00.303.10000**
- 4 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 00 – 06 ☎ **BC.HTA.00.304.10000**
Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 00 – 06 ☎ **BC.HTA.00.305.10000**
Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 00 – 06 ☎ **BC.HTA.00.301.10000**
QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 02 – 06 ☎ **GPS.01.646.10000/B**
Universal GPS-Kit Universal GPS Kit 00 – 06 ☎ **GPS.00.308.30000/B**
Lenkererhöhung. Schwarz. ø 22 mm. h 25 mm. Bar Riser. Black. ø 22 mm. h 25 mm. 00 – 06 + **LEH.00.039.150/25/B**
Lenkererhöhung. Silber. ø 22 mm. h 25 mm. Bar Riser. Silver. ø 22 mm. h 25 mm. 00 – 06 + **LEH.00.039.150/25/S**
Fußrasten-Kit. Silber. Footrest Kit. Silver. 00 – 06 + **FRS.01.011.10100/S**
Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 00 – 06 + **SVL.00.505.101**
Schutzbügel. Schwarz. Crashbar. Black. 00 – 06 ☎ **SBL.01.031.100**
Motorschutz. Silber. Engine Guard. Silver. 00 – 06 ☎ **MSS.01.068.100**
Hauptständer. Schwarz. Centerstand. Black. 00 – 06 ☎ **HPS.01.029.100**
Hauptständer-Hebegriff. Schwarz. Centerstand Assist Grip. Black. 00 – 06 ☎ **HPS.01.029.910**



NC 700 S / SD / NC 700 X



NC 700 S / SD / NC 700 X

- BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 11 – ☎ **BC.HTA.01.740.10700/B**
TraX® EVO Koffersystem. Schwarz. 37/37 l. TraX® EVO Pannier System. Black. 37/37 l.
11 – ☎ **KFT.01.129.50000/B**
TraX® EVO Koffersystem. Silber. 37/37 l. TraX® EVO Pannier System. Silver. 37/37 l.
11 – ☎ **KFT.01.129.50000/S**
TraX® EVO Koffersystem. Schwarz. 45/45 l. TraX® EVO Pannier System. Black. 45/45 l.
11 – ☎ **KFT.01.129.50100/B**
TraX® EVO Koffersystem. Silber. 45/45 l. TraX® EVO Pannier System. Silver. 45/45 l.
11 – ☎ **KFT.01.129.50100/S**
AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 11 – ☎ **KFT.01.129.60000/B**
1 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 11 – ☎ **KFT.01.129.20000/B**
2 ALU-RACK. Schwarz. ALU-RACK. Black. 11 – ☎ **GPT.01.151.15000/B**
Riemen-Tankrucksack Enduro LT. Schwarz. Strap Tankbag Enduro LT. Black. 11 – ☎ **BC.TRS.00.131.10000**
Riemen-Tankrucksack Enduro. Schwarz. Strap Tankbag Enduro. Black. 11 – ☎ **BC.TRS.00.130.10000**
Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 11 – ☎ **BC.HTA.00.307.10000**
Hecktasche Jetpack. Schwarz. Tailbag Jetpack. Black. 11 – ☎ **BC.HTA.00.303.10000**
Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 11 – ☎ **BC.HTA.00.304.10000**
Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 11 – ☎ **BC.HTA.00.305.10000**
Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 11 – ☎ **BC.HTA.00.306.10000**
Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 11 – ☎ **BC.HTA.00.301.10000**
Hecktasche Drybag L. Neon-Gelb. Tailbag Drybag L. Neon-Yellow. 11 – ☎ **BCK.HTA.00.047.100/Y**
QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 11 – ☎ **GPS.00.646.10200/B**
Universal GPS-Kit Universal GPS Kit 11 – ☎ **GPS.00.308.30000/B**
Schalthebel Gear Lever 11 – ☎ **FSC.01.127.10100/B**
Fußrasten-Kit. Silber. Footrest Kit. Silver. 11 – ☎ **FRS.01.011.10301/S**
Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal.
11 – + **SVL.00.505.101**
3 Schutzbügel. Schwarz. Crashbar. Black. 11 – ☎ **SBL.01.132.10000/B**
4 Hauptständer. Schwarz. Centerstand. Black. 11 – + **HPS.01.147.10000/B**



NC 700 X

- KOBRA Handprotektoren-Kit. Schwarz. KOBRA Handguard Kit. Black. 11 – ☎ **HPR.00.220.20200/B**
BB STORM Handprotektoren-Kit. Schwarz. BB STORM Handguard Kit. Black. 11 – ☎ **HPR.00.220.10200/B**
Hauptständer. Schwarz. Centerstand. Black. 11 – + **HPS.01.137.10000/B**



HONDA

NT 700 V Deauville



NT 700 V Deauville

- 1 ALU-RACK. Schwarz. ALU-RACK. Black. 05 – 09 **GPT.01.615.100/B**
Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 05 – **BC.HTA.00.307.10000**
Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 05 – **BC.HTA.00.304.10000**
Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 05 – **BC.HTA.00.305.10000**
Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 05 – **BC.HTA.00.306.10000**
Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 05 – **BC.HTA.00.301.10000**
Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 05 – **BCK.HTA.00.053.100/Y**
- 2 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 05 – 09 **GPS.00.646.10200/B**
Universal GPS-Kit Universal GPS Kit 05 – 09 **GPS.00.308.30000/B**
Lenkererhöhung. Schwarz. ø 22 mm. h 25 mm. Bar Riser. Black. ø 22 mm. h 25 mm. 05 – 09 **LEH.00.039.150/25/B**
Lenkererhöhung. Silber. ø 22 mm. h 25 mm. Bar Riser. Silver. ø 22 mm. h 25 mm. 05 – 09 **LEH.00.039.150/25/S**
Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 05 – 09 **SVL.01.501.11100/B**
- 3 Spiegelverlängerung. Schwarz. Verkleidungsausleger. Mirror Extension. Black. Link. 05 – 09 **SVL.00.503.100**



XL 700 V Transalp

- 4 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 07 – **KFT.01.464.20001/B**
- 5 ALU-RACK. Silber. ALU-RACK. Silver. 07 – **GPT.01.465.100/S**
ALU-RACK. Schwarz. ALU-RACK. Black. 07 – **GPT.01.465.100/B**
STEEL-RACK. Schwarz. STEEL-RACK. Black. 7 – **GPT.01.465.20001/B**
QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 07 – **TRT.00.640.10600/B**
QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 07 – **BC.TRS.00.108.20000**

HONDA

XL 700 V Transalp



- QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 07 – **BC.TRS.00.104.20000**
QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 07 – **BC.TRE.00.108.20000**
QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 07 – **BC.TRE.00.104.20000**
Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 07 – **BC.HTA.00.307.10000**
Hecktasche Jetpack. Schwarz. Tailbag Jetpack. Black. 07 – **BC.HTA.00.303.10000**
Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 07 – **BC.HTA.00.304.10000**
Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 07 – **BC.HTA.00.305.10000**
Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 07 – **BC.HTA.00.306.10000**
Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 07 – **BC.HTA.00.301.10000**
Hecktasche Drybag L. Neon-Gelb. Tailbag Drybag L. Neon-Yellow. 07 – **BCK.HTA.00.047.100/Y**
QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 07 – **GPS.01.646.10000/B**
Universal GPS-Kit Universal GPS Kit 07 – **GPS.00.308.30000/B**
Nonshock Endurance Lenker S. Schwarz. ø 28 mm. LEH.00.039.16300.03/B (S) notwendig. Nonshock Endurance Bar S. Black. ø 28 mm. LEH.00.039.16300.03/B (S) necessary. 07 – **LEN.00.156.11000/B**
Lenkeraufnahme. Silber. ø 28 mm. M12. Bar Mount. Silver. ø 28 mm. M12. 07 – 10 **LEH.00.039.16300.03/S**
Lenkeraufnahme. Schwarz. ø 28 mm. M12. Bar Mount. Black. ø 28 mm. M12. 07 – 10 **LEH.00.039.16300.03/B**
Lenkererhöhung. Silber. ø 22 mm. h 25 mm. Bar Riser. Silver. ø 22 mm. h 25 mm. 07 – 10 **LEH.00.039.150/25/S**
Lenkererhöhung. Schwarz. ø 22 mm. h 25 mm. Bar Riser. Black. ø 22 mm. h 25 mm. 07 – **LEH.00.039.150/25/B**
Fußrasten-Kit. Silber. Footrest Kit. Silver. 07 – **FRS.01.011.10100/S**
Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 07 – **SVL.00.505.101**
- 6 Schutzbügel. Schwarz. Crashbar. Black. 07 – **SBL.01.466.100**
 - 7 Motorschutz. Silber. Engine Guard. Silver. 07 – **MSS.01.468.100**
- HAWK Nebelscheinwerfer-Set. Schwarz. HAWK Fog Light Set. Black. 07 – 10 **NSW.01.004.50100/B**
HAWK Nebelscheinwerfer-Set. Silber. HAWK Fog Light Set. Silver. 07 – **NSW.01.004.50100/S**
HAWK Scheinwerferhalter-Set. Schwarz. HAWK Light Mount Set. Black. 07 – **NSW.01.004.10100/B**
KOBRA Handprotektoren-Kit. Schwarz. KOBRA Handguard Kit. Black. 07 – **HPR.00.220.20700/B**
BB STORM Handprotektoren-Kit. Schwarz. Ausschließlich mit original Lenker. BB STORM Handguard Kit. Black. For original handlebar only. 07 – **HPR.00.220.10700/B**
BB STORM Handprotektoren-Kit. Schwarz. Für Nonshock Endurance Lenker S. BB STORM Handguard Kit. Black. For Nonshock Endurance Bar S. 07 – 10 **HPR.00.220.10900/B**
KOBRA Handprotektoren-Kit. Schwarz. Für Nonshock Endurance Lenker S. BB STORM Handguard Kit. Black. For Nonshock Endurance Bar S. 07 – **HPR.00.220.20900/B**
Hauptständer. Schwarz. Centerstand. Black. 07 – **HPS.01.463.100**



HONDA

XRV 750 Africa Twin



- TraX® EVO Koffersystem. Schwarz. 45 l links/37 l rechts. TraX® EVO Pannier System. Black. 45 l left/37 l right. 92 – 03 **KFT.01.079.50000/B**
- TraX® EVO Koffersystem. Silber. 45 l links/37 l rechts. TraX® EVO Pannier System. Silver. 45 l left/37 l right. 92 – 03 **KFT.01.079.50000/S**
- QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 92 – 03 **KFT.01.079.20000/B**
- ALU-RACK. Silber. ALU-RACK. Silver. 92 – 03 **GPT.01.336.100/S**
- STEEL-RACK. Schwarz. STEEL-RACK. Black. 92 – 03 **GPT.01.336.20001/B**
- Riemen-Tankrucksack Enduro LT. Schwarz. Strap Tankbag Enduro LT. Black. 90 – 03 **BC.TRS.00.131.10000**
- Riemen-Tankrucksack Enduro. Schwarz. Strap Tankbag Enduro. Black. 90 – 03 **BC.TRS.00.130.10000**
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 90 – 03 **BC.HTA.00.307.10000**
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 90 – 03 **BC.HTA.00.304.10000**
- Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 90 – 03 **BC.HTA.00.305.10000**
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 90 – 03 **BC.HTA.00.306.10000**
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 90 – 03 **BC.HTA.00.301.10000**
- Hecktasche Drybag L. Neon-Gelb. Tailbag Drybag L. Neon-Yellow. 90 – 03 **BCK.HTA.00.047.100/Y**
- Universal GPS-Kit Universal GPS Kit 90 – 02 **GPS.00.308.30000/B**
- Nonshock Endurance Lenker. Schwarz. ø 28 mm. Nonshock Endurance Bar. Black. ø 28 mm. 92 – 02 **LEN.00.156.10001/B**
- Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 90 – 02 **LEH.00.039.168/S**
- Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 90 – 02 **LEH.00.039.168/B**
- Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 90 – 02 **LEH.00.039.150/30/S**
- Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 90 – 02 **LEH.00.039.150/30/B**
- Lenkerverlegung. Schwarz. Barback. Black. 90 – 02 **LEH.00.039.152/B**
- Lenkerverlegung. Silber. Barback. Silver. 90 – 02 **LEH.00.039.152/S**
- Fußrasten-Kit. Silber. Footrest Kit. Silver. 89 – 03 **FRS.01.011.10200/S**
- Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 89 – 03 **SVL.00.505.101**
- Schutzbügel. Schwarz. Crashbar. Black. 90 – 92 **SBL.01.084.10000/B**
- 2** Schutzbügel. Weiß. Crashbar. White. 90 – 03 **SBL.01.084.10000/W**
- HAWK Nebelscheinwerfer-Set. Schwarz. HAWK Fog Light Set. Black. 92 – 03 **NSW.01.004.50000/B**
- HAWK Nebelscheinwerfer-Set. Silber. HAWK Fog Light Set. Silver. 92 – 03 **NSW.01.004.50000/S**
- 3** HAWK Scheinwerferhalter-Set. Schwarz. HAWK Light Mount Set. Black. 92 – 03 **NSW.01.004.10000/B**
- BB STORM Handprotektoren-Kit. Schwarz. BB STORM Handguard Kit. Black. 92 – 03 **HPR.00.220.10900/B**
- KOBRA Handprotektoren-Kit. Schwarz. KOBRA Handguard Kit. Black. 92 – 03 **HPR.00.220.20900/B**
- 4** Hauptständer. Schwarz. Centerstand. Black. 92 – 03 **HPS.01.023.100**



VFR 800 X Crossrunner



- 1** BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 11 – **BC.HTA.01.740.10500/B**
- 2** ALU-RACK. Schwarz. ALU-RACK. Black. 11 – **GPT.01.769.15000/B**
- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 11 – **TRT.00.640.10600/B**
- QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 11 – **BC.TRS.00.110.20000**
- QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 11 – **BC.TRS.00.108.20000**
- QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 11 – **BC.TRS.00.104.20000**
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 11 – **BC.TRE.00.110.20000**
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 11 – **BC.TRE.00.108.20000**
- QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 11 – **BC.TRE.00.104.20000**
- Riemen-Tankrucksack Enduro. Schwarz. Strap Tankbag Enduro. Black. 11 – **BC.TRS.00.130.10000**
- Riemen-Tankrucksack Enduro LT. Schwarz. Strap Tankbag Enduro LT. Black. 11 – **BC.TRS.00.131.10000**
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 11 – **BC.HTA.00.307.10000**
- Hecktasche Jetpack. Schwarz. Tailbag Jetpack. Black. 11 – **BC.HTA.00.303.10000**
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 11 – **BC.HTA.00.304.10000**
- Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 11 – **BC.HTA.00.305.10000**
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 11 – **BC.HTA.00.306.10000**
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 11 – **BC.HTA.00.301.10000**
- Hecktasche Drybag L. Neon-Gelb. Tailbag Drybag L. Neon-Yellow. 11 – **BCK.HTA.00.047.100/Y**
- 3** QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 11 – **GPS.01.646.10400/B**
- Universal GPS-Kit Universal GPS Kit 11 – **GPS.00.308.30000/B**
- 4** Lenkerumbau-Set. Schwarz. ø 22 mm. h 80 mm. Bar Riser Set. Black. ø 22 mm. h 80 mm. 11 – **LEH.01.039.10500/B**
- Fußrasten-Kit. Silber. Footrest Kit. Silver. 11 – **FRS.01.011.10300/S**
- Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 11 – **SVL.00.505.101**
- Schutzbügel. Schwarz. Crashbar. Black. 11 – **SBL.01.767.10000/B**
- Hauptständer. Schwarz. Centerstand. Black. 11 – **HPS.01.766.10000/B**





VFR 800

QUICK-LOCK Kofferträger. Schwarz. QUICK-LOCK Side Carrier. Black. 98 – 01 ☎ [KFT.01.064.100](#)

QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 98 – 01 ☎ [TRT.00.640.10600/B](#)

1 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 98 – 01 ☎ [BC.TRS.00.110.20000](#)

2 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 98 – 01 ☎ [BC.TRS.00.108.20000](#)

3 QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 98 – 01 ☎ [BC.TRS.00.101.20000](#)

QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 98 – 01 ☎ [BC.TRE.00.110.20000](#)

QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 98 – 01 ☎ [BC.TRE.00.108.20000](#)

QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 98 – 01 ☎ [BC.TRE.00.101.20000](#)

Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 08 – 98 – 01 [BC.HTA.00.307.10000](#)

4 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 98 – 01 ☎ [BC.HTA.00.304.10000](#)

Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 98 – 01 ☎ [BC.HTA.00.306.10000](#)

Hecktasche Racepack®. Schwarz. Tailbag Racepack®. Black. 98 – 01 ☎ [BC.HTA.00.302.10000](#)

Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 98 – 01 ☎ [BC.HTA.00.301.10000](#)

Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 98 – 01 ☎ [BCK.HTA.00.053.100/Y](#)

Universal GPS-Kit Universal GPS Kit 98 – 01 ☎ [GPS.00.308.30000/B](#)

Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 97 – 99 ➕ [SVL.01.501.102](#)

Spiegelverlängerung. Schwarz. Gelenk-Distanzstück I. Mirror Extension. Black. Hinge I. 98 – 01 ➖ [SVL.01.500.100](#)



VFR 800 V-tec

AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 02 – 06 ☎ [KFT.01.134.60000/B](#)

5 QUICK-LOCK Kontur-Kofferträger. Schwarz. Für GIVI V35/KAPPA K33N.

QUICK-LOCK Profile Side Carrier. Black. For GIVI V35/KAPPA K33N. 02 – 06 ☎ [KFT.01.134.150](#)

6 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black.

02 – 06 ☎ [KFT.01.134.20000/B](#)

7 ALU-RACK. Schwarz. ALU-RACK. Black. 02 – 06 ☎ [GPT.01.208.15000/B](#)

QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black.

02 – 06 ☎ [TRT.00.640.10600/B](#)

QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 02 – 06 ☎ [BC.TRS.00.110.20000](#)

QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 02 – 06 ☎ [BC.TRS.00.108.20000](#)

QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 02 – 06 ☎ [BC.TRS.00.101.20000](#)

QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 02 – 06 ☎ [BC.TRE.00.110.20000](#)



QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 02 – 06 ☎ [BC.TRE.00.108.20000](#)

QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 02 – 06 ☎ [BC.TRE.00.101.20000](#)

Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 02 – 06 ☎ [BC.HTA.00.307.10000](#)

Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 02 – 06 ☎ [BC.HTA.00.304.10000](#)

Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 02 – 06 ☎ [BC.HTA.00.305.10000](#)

Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 02 – 06 ☎ [BC.HTA.00.306.10000](#)

Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 02 – 06 ☎ [BC.HTA.00.301.10000](#)

Hecktasche Drybag L. Neon-Gelb. Tailbag Drybag L. Neon-Yellow. 02 – 06 ☎ [BCK.HTA.00.047.100/Y](#)

Spiegelverlängerung. Schwarz. Gelenk-Distanzstück I. Mirror Extension. Black. Hinge I. 02 – 06 ➖ [SVL.01.500.100](#)





QUICK-LOCK Kofferträger. Schwarz. QUICK-LOCK Side Carrier. Black. 02 – 05 [KFT.01.114.100](#)
 ALU-RACK. Schwarz. ALU-RACK. Black. 02 – 05 [GPT.01.131.100/B](#)
 QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 02 – 05 [TRT.00.640.10600/B](#)
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 02 – 05 [BC.TRS.00.110.20000](#)
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 02 – 05 [BC.TRS.00.108.20000](#)
 QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 02 – 05 [BC.TRS.00.101.20000](#)
 QUICK-LOCK EVO Trial. Schwarz. QUICK-LOCK EVO Trial. Black. 02 – 05 [BC.TRS.00.102.20000](#)
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 02 – 05 [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 02 – 05 [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 02 – 05 [BC.TRE.00.101.20000](#)
 QUICK-LOCK EVO Elektrik Trial. Schwarz. QUICK-LOCK EVO Electric Trial. Black. 02 – 05 [BC.TRE.00.102.20000](#)
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 02 – 05 [BC.HTA.00.307.10000](#)
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 02 – 05 [BC.HTA.00.304.10000](#)
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 02 – 05 [BC.HTA.00.305.10000](#)
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 02 – 05 [BC.HTA.00.301.10000](#)
 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 02 – 05 [GPS.00.646.10000/B](#)
 Universal GPS-Kit Universal GPS Kit 02 – 05 [GPS.00.308.30000/B](#)
 Nonshock Endurance Lenker S. Schwarz. ø 28 mm. Nonshock Endurance Bar S. Black. ø 28 mm. 01 – 05 [LEN.00.156.11000/B](#)

Lenkerverlegung. Schwarz. Barback. Black. 02 – 05 [LEH.00.039.152/B](#)
 Lenkerverlegung. Silber. Barback. Silver. 02 – 05 [LEH.00.039.152/S](#)
 Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 02 – 05 [LEH.00.039.150/30/S](#)
 Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 02 – 05 [LEH.00.039.150/30/B](#)
 Lenker-Konverter-Set. Schwarz. ø 22 mm auf ø 28 mm. Inklusive LSL-Lenker ø 28 mm. Bar Converter Set. Black. ø 22 mm to ø 28 mm. LSL handlebar ø 28 mm incl. 02 – 05 [LEH.00.039.168/B](#)
 Lenker-Konverter-Set. Silber. ø 22 mm auf ø 28 mm. Inklusive LSL-Lenker ø 28 mm. Bar Converter Set. Silver. ø 22 mm to ø 28 mm. LSL handlebar ø 28 mm incl. 02 – 05 [LEH.00.039.168/S](#)
 Spiegelverlängerung. Schwarz. Lenkerausleger. Mirror Extension. Black. Universal. 01 – 05 [SVL.00.505.101](#)

- 1** Schutzbügel. Schwarz. Crashbar. Black. 02 – 05 [SBL.01.113.100](#)
 BB STORM Handprotektoren-Kit. Schwarz. BB STORM Handguard Kit. Black. 01 – 05 [HPR.00.220.10900/B](#)
 KOBRA Handprotektoren-Kit. Schwarz. KOBRA Handguard Kit. Black. 01 – 05 [HPR.00.220.20900/B](#)
2 Hauptständer. Schwarz. Centerstand. Black. 01 – 05 [HPS.01.109.100](#)



- 1** BLAZE® H Satteltaschen-Set. Schwarz. BLAZE® H Panniers Set. Black. 08 – [BC.HTA.01.740.10100/B](#)
2 ALU-RACK. Schwarz. ALU-RACK. Black. 08 – [GPT.01.462.15000/B](#)
3 QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 08 – [TRT.00.640.10600/B](#)
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 08 – [BC.TRS.00.110.20000](#)
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 08 – [BC.TRS.00.108.20000](#)
 QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 08 – [BC.TRS.00.101.20000](#)
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 08 – [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 08 – [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 08 – [BC.TRE.00.101.20000](#)
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 08 – [BC.HTA.00.307.10000](#)
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 08 – [BC.HTA.00.304.10000](#)
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 08 – [BC.HTA.00.305.10000](#)
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 08 – [BC.HTA.00.306.10000](#)
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 08 – [BC.HTA.00.301.10000](#)
 Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 08 – [BCK.HTA.00.053.100/Y](#)
 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 08 – [GPS.01.646.10301/B](#)
 Universal GPS-Kit Universal GPS Kit 08 – 09 [GPS.00.308.30000/B](#)
 Lenkererhöhung. Schwarz. ø 22 mm. h 20 mm. Bar Riser. Black. ø 22 mm. h 20 mm. 08 – 10 [LEH.00.039.150/20/B](#)
 Lenkererhöhung. Silber. ø 22 mm. h 20 mm. Bar Riser. Silver. ø 22 mm. h 20 mm. 08 – 10 [LEH.00.039.150/20/S](#)
 Schalthebel. Verstellbar. Gear Lever. Adjustable. 08 – [FSC.01.127.10000/B](#)
 Spiegelverlängerung. Schwarz. Lenkerausleger. Mirror Extension. Black. Universal. 08 – [SVL.00.505.101](#)
 Schutzbügel. Schwarz. Crashbar. Black. 08 – 10 [SBL.01.461.100](#)
4 Sturzpad-Kit Frame Slider Kit 08 – [STP.01.590.10000/B](#)



HONDA CBF 1000



- 1 BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 06 – 09 [BC.HTA.01.740.10200/B](#)
 AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 06 – 09 [KFT.01.278.60000/B](#)
 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 06 – 09 [KFT.01.278.200](#)
 QUICK-LOCK Kontur-Kofferträger. Schwarz. Für GIVI V35/KAPPA K33N. QUICK-LOCK Profile Side Carrier. Black. For GIVI V35/KAPPA K33N. 06 – 09 [KFT.01.278.150](#)
- 2 ALU-RACK. Schwarz. ALU-RACK. Black. 06 – 09 [GPT.01.277.15000/B](#)
 QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 06 – 09 [TRT.00.640.10600/B](#)
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 06 – 09 [BC.TRS.00.110.20000](#)
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 06 – 09 [BC.TRS.00.108.20000](#)
 QUICK-LOCK EVO Engage. Schwarz. QUICK-LOCK EVO Engage. Black. 06 – 09 [BC.TRS.00.107.20000](#)
 QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 06 – 09 [BC.TRS.00.104.20000](#)
 QUICK-LOCK EVO Trial. Schwarz. QUICK-LOCK EVO Trial. Black. 06 – 09 [BC.TRS.00.102.20000](#)
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 06 – 09 [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 06 – 09 [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik Engage. Schwarz. QUICK-LOCK EVO Electric Engage. Black. 06 – 09 [BC.TRE.00.107.20000](#)
 QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 06 – 09 [BC.TRE.00.104.20000](#)
 QUICK-LOCK EVO Elektrik Trial. Schwarz. QUICK-LOCK EVO Electric Trial. Black. 06 – 09 [BC.TRE.00.102.20000](#)
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 06 – 09 [BC.HTA.00.307.10000](#)
 Hecktasche Jetpack. Schwarz. Tailbag Jetpack. Black. 06 – 09 [BC.HTA.00.303.10000](#)
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 06 – 09 [BC.HTA.00.304.10000](#)
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 06 – 09 [BC.HTA.00.305.10000](#)
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 06 – 09 [BC.HTA.00.306.10000](#)
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 06 – 09 [BC.HTA.00.301.10000](#)
 Hecktasche Drybag L. Neon-Gelb. Tailbag Drybag L. Neon-Yellow. 06 – 09 [BCK.HTA.00.047.100/Y](#)
 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 06 – 09 [GPS.01.646.10200/B](#)
 Universal GPS-Kit. Universal GPS Kit. 06 – 09 [GPS.00.308.30000/B](#)
 Nonshock Endurance Lenker. Schwarz. ø 28 mm. Nonshock Endurance Bar. Black. ø 28 mm. 06 – 09 [LEN.00.156.10001/B](#)
 Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 06 – 09 [LEH.00.039.168/S](#)
 Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 06 – 09 [LEH.00.039.168/B](#)



HONDA CBF 1000 / CBR 1000 RR



- Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 06 – 09 [LEH.00.039.150/30/B](#)
 Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 06 – 09 [LEH.00.039.150/30/S](#)
 Lenkerverlegung. Silber. Barback. Silver. 06 – 09 [LEH.00.039.152/S](#)
 Lenkerverlegung. Schwarz. Barback. Black. 06 – 09 [LEH.00.039.152/B](#)
- 3 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 06 – 09 [SVL.01.501.10800/B](#)
 Spiegelverlängerung. Schwarz. Verkleidungsausleger. Mirror Extension. Black. Link. 06 – 09 [SVL.00.503.100](#)
- 4 Schutzbügel. Schwarz. Crashbar. Black. 06 – 09 [SBL.01.215.100](#)
 Sturzpad-Kit Frame Slider Kit 06 – 09 [STP.01.590.10101/B](#)

CBR 1000 RR

- BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 04 – 07 [BC.HTA.01.740.10600/B](#)
 BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 08 – [BC.HTA.01.740.10400/B](#)
 QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 04 – [TRT.00.640.10600/B](#)
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 04 – [BC.TRS.00.110.20000](#)
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 04 – [BC.TRS.00.108.20000](#)
 QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 04 – [BC.TRS.00.101.20000](#)
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 04 – [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 04 – [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 04 – [BC.TRE.00.101.20000](#)
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 04 – [BC.HTA.00.307.10000](#)
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 04 – [BC.HTA.00.304.10000](#)
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 04 – [BC.HTA.00.306.10000](#)
 Hecktasche Racepack®. Schwarz. Tailbag Racepack®. Black. 04 – [BC.HTA.00.302.10000](#)
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 04 – [BC.HTA.00.301.10000](#)
 Hecktasche Drybag M. Neon-Gelb. Tailbag Drybag M. Neon-Yellow. 04 – [BCK.HTA.00.053.100/Y](#)
 Spiegelverlängerung. Schwarz. Verkleidungsausleger. Mirror Extension. Black. Link. 04 – 07 [SVL.00.503.100](#)
 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 08 – 11 [SVL.01.501.10600/B](#)
 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 12 – [SVL.01.501.10300/B](#)
 Sturzpad-Kit Frame Slider Kit 04 – 07 [STP.01.590.10300/B](#)
 Sturzpad-Kit Frame Slider Kit 08 – 11 [STP.01.590.10200/B](#)





- 1 BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 09 – BC.HTA.01.740.10200/B
AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 09 – KFT.01.730.60000/B
- 2 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 09 – KFT.01.730.20000/B
QUICK-LOCK Kontur-Kofferträger. Schwarz. Für GIVI V35/KAPPA K33N. QUICK-LOCK Profile Side Carrier. Black.
For GIVI V35/KAPPA K33N. 09 – KFT.01.730.15000/B
- 3 ALU-RACK. Schwarz. ALU-RACK. Black. 09 – GPT.01.731.15000/B
- 4 QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 09 – TRT.00.640.10600/B
QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 09 – BC.TRS.00.110.20000
QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 09 – BC.TRS.00.108.20000
QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 09 – BC.TRS.00.104.20000
QUICK-LOCK EVO GS. Schwarz. QUICK-LOCK EVO GS. Black. 09 – BC.TRS.00.103.20000
QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 09 – BC.TRE.00.110.20000
QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 09 – BC.TRE.00.108.20000
QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 09 – BC.TRE.00.104.20000
QUICK-LOCK EVO Elektrik GS. Schwarz. QUICK-LOCK EVO Electric GS. Black. 09 – BC.TRE.00.103.20000



- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 09 – BC.HTA.00.307.10000
Hecktasche Jetpack. Schwarz. Tailbag Jetpack. Black. 09 – BC.HTA.00.303.10000
Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 09 – BC.HTA.00.304.10000
Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 09 – BC.HTA.00.305.10000
Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 09 – BC.HTA.00.306.10000
Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 09 – BC.HTA.00.301.10000
Hecktasche Drybag L. Neon-Gelb. Tailbag Drybag L. Neon-Yellow. 09 – BCK.HTA.00.047.100/Y
QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 09 – GPS.01.646.10200/B
Universal GPS-Kit Universal GPS Kit 09 – GPS.00.308.30000/B
Lenkererhöhung. Silber. ø 22 mm. h 25 mm. Bar Riser. Silver. ø 22 mm. h 25 mm. 09 – LEH.00.039.150/25/S
Lenkererhöhung. Schwarz. ø 22 mm. h 25 mm. Bar Riser. Black. ø 22 mm. h 25 mm. 09 – LEH.00.039.150/25/B
Lenkererhöhung. Silber. ø 22 mm. h 20 mm. Bar Riser. Silver. ø 22 mm. h 20 mm. 09 – LEH.00.039.150/20/S
5 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 09 – SVL.01.501.10800/B
6 Schutzbügel. Schwarz. Crashbar. Black. 09 – 11 SBL.01.110.10000/B
7 Sturzpad-Kit Frame Slider Kit 09 – STP.01.590.10101/B



HONDA XL 1000 V Varadero



- TraX® EVO Koffersystem. Schwarz. 37 l links/37 l rechts. TraX® EVO Pannier System. Black. 37 l left/37 l right. 07 – 11
 Ⓢ KFT.01.624.50000/B
- TraX® EVO Koffersystem. Silber. 37 l links/37 l rechts. TraX® EVO Pannier System. Silver. 37 l left/37 l right. 07 – 11
 Ⓢ KFT.01.624.50000/S
- TraX® EVO Koffersystem. Schwarz. 45 l links/45 l rechts. TraX® EVO Pannier System. Black. 45 l left/45 l right. 07 – 11
 Ⓢ KFT.01.624.50100/B
- TraX® EVO Koffersystem. Silber. 45 l links/45 l rechts. TraX® EVO Pannier System. Silver. 45 l left/45 l right. 07 – 11
 Ⓢ KFT.01.624.50100/S
- 1** QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 07 – 11 Ⓢ KFT.01.624.200
 QUICK-LOCK Kofferträger. Schwarz. QUICK-LOCK Side Carrier. Black. 98 – 00 Ⓢ KFT.01.117.100
 QUICK-LOCK Kofferträger. Schwarz. QUICK-LOCK Side Carrier. Black. 01 – 06 Ⓢ KFT.01.231.100
- ALU-RACK. Silber. ALU-RACK. Silver. 98 – 06 Ⓢ GPT.01.336.100/S
- 2** ALU-RACK. Silber. ALU-RACK. Silver. 07 – 11 Ⓢ GPT.01.625.100/S
 STEEL-RACK. Silber. STEEL-RACK. Silver. 98 – 06 Ⓢ GPT.01.336.20001/B
- 3** STEEL-RACK. Schwarz. STEEL-RACK. Black. 07 – 11 Ⓢ GPT.01.625.20001/B
 QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 98 – 11 Ⓢ TRT.00.640.10600/B
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 98 – 11 Ⓢ BC.TRS.00.110.20000
- 4** QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 98 – 11 Ⓢ BC.TRS.00.108.20000
- 5** QUICK-LOCK EVO Engage. Schwarz. QUICK-LOCK EVO Engage. Black. 98 – 11 Ⓢ BC.TRS.00.107.20000
 QUICK-LOCK EVO Trial. Schwarz. QUICK-LOCK EVO Trial. Black. 98 – 11 Ⓢ BC.TRS.00.102.20000
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 98 – 11 Ⓢ BC.TRE.00.110.20000
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 98 – 11 Ⓢ BC.TRE.00.108.20000
 QUICK-LOCK EVO Elektrik Engage. Schwarz. QUICK-LOCK EVO Electric Engage. Black. 98 – 11 Ⓢ BC.TRE.00.107.20000
 QUICK-LOCK EVO Elektrik Trial. Schwarz. QUICK-LOCK EVO Electric Trial. Black. 98 – 11 Ⓢ BC.TRE.00.102.20000
 Riemen-Tankrucksack Enduro LT. Schwarz. Strap Tankbag Enduro LT. Black. 98 – 11 Ⓢ BC.TRS.00.131.10000
 Riemen-Tankrucksack Enduro. Schwarz. Strap Tankbag Enduro. Black. 98 – 11 Ⓢ BC.TRS.00.130.10000
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 08 – Ⓢ BC.HTA.00.307.10000
 Hecktasche Jetpack. Schwarz. Tailbag Jetpack. Black. 10 – Ⓢ BC.HTA.00.303.10000
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 08 – Ⓢ BC.HTA.00.304.10000
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 10 – Ⓢ BC.HTA.00.305.10000
- 6** Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 08 Ⓢ BC.HTA.00.306.10000
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 08 – Ⓢ BC.HTA.00.301.10000
 Hecktasche Drybag L. Neon-Gelb. Tailbag Drybag L. Neon-Yellow. 10 – Ⓢ BCK.HTA.00.047.100/Y
 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 98 – 11 Ⓢ GPS.01.646.10000/B



- Universal GPS-Kit Universal GPS Kit 98 – 11 Ⓢ GPS.00.308.30000/B
- Lenkererhöhung. Schwarz. ø 22 mm. h 25 mm. Bar Riser. Black. ø 22 mm. h 25 mm. 98 – 11 + LEH.00.039.150/25/B
- Lenkererhöhung. Silber. ø 22 mm. h 25 mm. Bar Riser. Silver. ø 22 mm. h 25 mm. 98 – 11 + LEH.00.039.150/25/S
- Fußrasten-Kit. Silber. Footrest Kit. Silver. 98 – 00 + FRS.01.011.10400/S
- 7** Fußrasten-Kit. Silber. Footrest Kit. Silver. 01 – 06 + FRS.17.011.10000/S
 Fußrasten-Kit. Silber. Footrest Kit. Silver. 07 – 11 + FRS.01.011.10400/S
- Spiegelverlängerung. Schwarz. Lenkerausleger. Mirror Extension. Black. Universal. 98 – 11 + SVL.00.505.101
- Schutzbügel. Schwarz. Fachwerkstatt-Montage empfohlen. Crashbar. Black. Professional installation recommended.
 03 – 03 Ⓢ SBL.01.225.100
- Schutzbügel. Schwarz. Fachwerkstatt-Montage empfohlen. Crashbar. Black. Professional installation recommended.
 04 – 05 Ⓢ SBL.01.320.100
- 8** Schutzbügel. Schwarz. Fachwerkstatt-Montage empfohlen. Crashbar. Black. Professional installation recommended.
 06 – 11 Ⓢ SBL.01.322.100
- Motorschutz. Schwarz. Engine Guard. Black. 07 – 11 Ⓢ MSS.01.720.10000/B
- HAWK Scheinwerferhalter-Set. Schwarz. HAWK Light Mount Set. Black. 01 – 11 Ⓢ NSW.01.004.10200/B
- HAWK Nebelscheinwerfer-Set. Schwarz. HAWK Fog Light Set. Black. 01 – 11 Ⓢ NSW.01.004.50200/B
- HAWK Nebelscheinwerfer-Set. Silber. HAWK Fog Light Set. Silver. 01 – 11 Ⓢ NSW.01.004.50200/S
- KOBRA Handprotektoren-Kit. Schwarz. KOBRA Handguard Kit. Black. 98 – 11 Ⓢ HPR.00.220.20200/B
- BB STORM Handprotektoren-Kit. Schwarz. BB STORM Handguard Kit. Black. 98 – 11 Ⓢ HPR.00.220.10200/B
- Hauptständer. Schwarz. Centerstand. Black. 98 – 00 + HPS.01.048.100
- Hauptständer. Schwarz. Centerstand. Black. 01 – 11 + HPS.01.223.100
- Hauptständer-Hebegriff. Schwarz. Centerstand Assist Grip. Black. 98 – 11 + HPS.01.223.910



HONDA CBR 1100 XX Blackbird



- AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 99 – 06 [KFT.01.061.60000/B](#)
- 1** QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 01 – 06 [KFT.01.061.20001/B](#)
- 2** ALU-RACK. Schwarz. ALU-RACK. Black. 99 – 06 [GPT.01.207.15000/B](#)
- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 99 – 06 [TRT.00.640.10600/B](#)
- QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 99 – 06 [BC.TRS.00.110.20000](#)
- QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 99 – 06 [BC.TRS.00.108.20000](#)
- QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 99 – 06 [BC.TRS.00.101.20000](#)
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 99 – 06 [BC.TRE.00.110.20000](#)
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 99 – 06 [BC.TRE.00.108.20000](#)
- QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 99 – 06 [BC.TRE.00.101.20000](#)
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 99 – 06 [BC.HTA.00.307.10000](#)
- Hecktasche Jetpack. Schwarz. Tailbag Jetpack. Black. 99 – 06 [BC.HTA.00.303.10000](#)
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 99 – 06 [BC.HTA.00.304.10000](#)
- Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 99 – 06 [BC.HTA.00.305.10000](#)
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 99 – 06 [BC.HTA.00.306.10000](#)
- Hecktasche Racepack®. Schwarz. Tailbag Racepack®. Black. 99 – 06 [BC.HTA.00.302.10000](#)
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 99 – 06 [BC.HTA.00.301.10000](#)
- Hecktasche Drybag L. Neon-Gelb. Tailbag Drybag L. Neon-Yellow. 99 – 06 [BCK.HTA.00.047.100/Y](#)
- 3** Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 96 – 06 [SVL.01.501.104](#)



VFR 1200 X Crosstourer

HONDA



- 1** STEEL-RACK. Schwarz. STEEL-RACK. Black. 11 – [GPT.01.661.20001/B](#)
- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 11 – [TRT.00.640.10600/B](#)
- QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 11 – [BC.TRS.00.110.20000](#)
- QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 11 – [BC.TRS.00.108.20000](#)
- QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 11 – [BC.TRS.00.104.20000](#)
- QUICK-LOCK EVO GS. Schwarz. QUICK-LOCK EVO GS. Black. 11 – [BC.TRS.00.103.20000](#)
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 11 – [BC.TRE.00.110.20000](#)
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 11 – [BC.TRE.00.108.20000](#)
- QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 11 – [BC.TRE.00.104.20000](#)
- QUICK-LOCK EVO Elektrik GS. Schwarz. QUICK-LOCK EVO Electric GS. Black. 11 – [BC.TRE.00.103.20000](#)
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 11 – [BC.HTA.00.307.10000](#)
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 11 – [BC.HTA.00.304.10000](#)
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 11 – [BC.HTA.00.306.10000](#)
- Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 11 – [BC.HTA.00.305.10000](#)
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 11 – [BC.HTA.00.301.10000](#)
- Hecktasche Drybag L. Neon-Gelb. Tailbag Drybag L. Neon-Yellow. 11 – [BCK.HTA.00.047.100/Y](#)
- QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 11 – [GPS.01.646.10500/B](#)
- Universal GPS-Kit Universal GPS Kit 11 – [GPS.00.308.30000/B](#)
- Fußrasten-Kit. Silber. Footrest Kit. Silver. 11 – [FRS.01.011.10300/S](#)
- Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 11 – [SVL.00.505.101](#)
- 2** Motorschutz. Silber. Engine Guard. Silver. 11 – [MSS.01.663.10000/S](#)
- HAWK Scheinwerferhalter-Set. Schwarz. HAWK Light Mount Set. Black. 11 – [NSW.01.004.10300/B](#)
- 3** HAWK Nebelscheinwerfer-Set. Schwarz. HAWK Fog Light Set. Black. 11 – [NSW.01.004.50300/B](#)
- HAWK Nebelscheinwerfer-Set. Silber. HAWK Fog Light Set. Silver. 11 – [NSW.01.004.50300/S](#)
- KOBRA Handprotektoren-Kit. Schwarz. KOBRA Handguard Kit. Black. 11 – [HPR.00.220.20200/B](#)
- BB STORM Handprotektoren-Kit. Schwarz. BB STORM Handguard Kit. Black. 11 – [HPR.00.220.10200/B](#)
- Hauptständer. Schwarz. Centerstand. Black. 11 – [HPS.01.111.10000/B](#)





- 1** QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 09 - [KFT.01.724.20000/B](#)
- 2** QUICK-LOCK Kontur-Kofferträger. Schwarz. Für GIVI V35/KAPPA K33N. QUICK-LOCK Profile Side Carrier. Black. For GIVI V35/KAPPA K33N. 09 - [KFT.01.724.15000/B](#)
- 3** ALU-RACK. Schwarz. ALU-RACK. Black. 09 - [GPT.01.723.15000/B](#)
 QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 09 - [TRT.00.640.10600/B](#)
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 09 - [BC.TRS.00.110.20000](#)
- 4** QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 09 - [BC.TRS.00.108.20000](#)
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 09 - [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 09 - [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 09 - [BC.TRE.00.104.20000](#)
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 09 - [BC.HTA.00.307.10000](#)
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 09 - [BC.HTA.00.304.10000](#)
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 09 - [BC.HTA.00.305.10000](#)
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 09 - [BC.HTA.00.306.10000](#)
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 09 - [BC.HTA.00.301.10000](#)



Hecktasche Drybag L. Neon-Gelb. Tailbag Drybag L. Neon-Yellow. 09 - [BCK.HTA.00.047.100/Y](#)

Universal GPS-Kit Universal GPS Kit 09 - [GPS.00.308.30000/B](#)

- 5** Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 09 - [SVL.01.501.10600/B](#)
- 6** Hauptständer. Schwarz. Centerstand. Black. 09 - [HPS.01.729.10001/B](#)





- 1** QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 03 - 09 [KFT.01.251.200](#)
- 2** ALU-RACK. Schwarz. ALU-RACK. Black. 03 - 09 [GPT.01.254.100/B](#)
 ALU-RACK. Silber. ALU-RACK. Silver. 03 - 09 [GPT.01.254.100/S](#)
 QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 03 - 09 [TRT.00.640.10600/B](#)
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 03 - 09 [BC.TRS.00.110.20000](#)
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 03 - 09 [BC.TRS.00.108.20000](#)
 QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 03 - 09 [BC.TRS.00.101.20000](#)
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 03 - 09 [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 03 - 09 [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 03 - 09 [BC.TRE.00.101.20000](#)
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 03 - 09 [BC.HTA.00.307.10000](#)
 Hecktasche Jetpack. Schwarz. Tailbag Jetpack. Black. 03 - 09 [BC.HTA.00.303.10000](#)
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 03 - 09 [BC.HTA.00.304.10000](#)
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 03 - 09 [BC.HTA.00.305.10000](#)
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 03 - 09 [BC.HTA.00.306.10000](#)
 Hecktasche Racepack®. Schwarz. Tailbag Racepack®. Black. 03 - 09 [BC.HTA.00.302.10000](#)
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 03 - 09 [BC.HTA.00.301.10000](#)
 Hecktasche Drybag L. Neon-Gelb. Tailbag Drybag L. Neon-Yellow. 03 - 09 [BCK.HTA.00.047.100/Y](#)
 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 03 - 09 [GPS.00.646.10000/B](#)
 Universal GPS-Kit Universal GPS Kit 03 - 09 [GPS.00.308.30000/B](#)
 Lenkererhöhung. Schwarz. ø 22 mm. h 20 mm. Bar Riser. Black. ø 22 mm. h 20 mm. 03 - 09 [LEH.00.039.150/20/B](#)
 Lenkererhöhung. Silber. ø 22 mm. h 20 mm. Bar Riser. Silver. ø 22 mm. h 20 mm. 03 - 09 [LEH.00.039.150/20/S](#)
- 3** Fußrasten-Kit. Silber. Footrest Kit. Silver. 03 - 09 [FRS.01.011.10400/S](#)
 Schutzbügel. Schwarz. Crashbar. Black. 03 - 09 [SBL.01.253.10002/B](#)
- 4** Hauptständer. Schwarz. Centerstand. Black. 03 - 09 [HPS.01.581.10000/B](#)



CB 1300

Spiegelverlängerung. Schwarz. Lenkerausleger. Mirror Extension. Black. Universal. 03 - 09 [SVL.00.505.101](#)

CB 1300 S

AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 10 - [KFT.01.122.60000/B](#)

QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 10 - [KFT.01.122.20000/B](#)

ALU-RACK. Schwarz. ALU-RACK. Black. 10 - [GPT.01.126.10000/B](#)

Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 05 - [SVL.01.501.11200/B](#)

Spiegelverlängerung. Schwarz. Verkleidungsausleger. Mirror Extension. Black. Link. 05 - [SVL.00.503.100](#)





SW-MOTEC GmbH & Co. KG

BAGS-CONNECTION GmbH & Co. KG

Ernteweg 8/10 . 35282 Rauschenberg . Germany

phone +49 6425 8168-050 . fax +49 6425 8168-10

info@sw-bc.com . www.sw-bc.com

Händler / Dealer